

- ① 9 1/2" for 2" end of beam clearance and 10 1/2" for 3" end of beam clearance.
- ② Distance to \varnothing Brg to be determined by designer.
- ③ Bottom Beam Flanges need to be clipped and the distance to centerline of bearing must be calculated as done at Abutments and Inverted-T Bents when distance between beams is less than Brg Seat width.

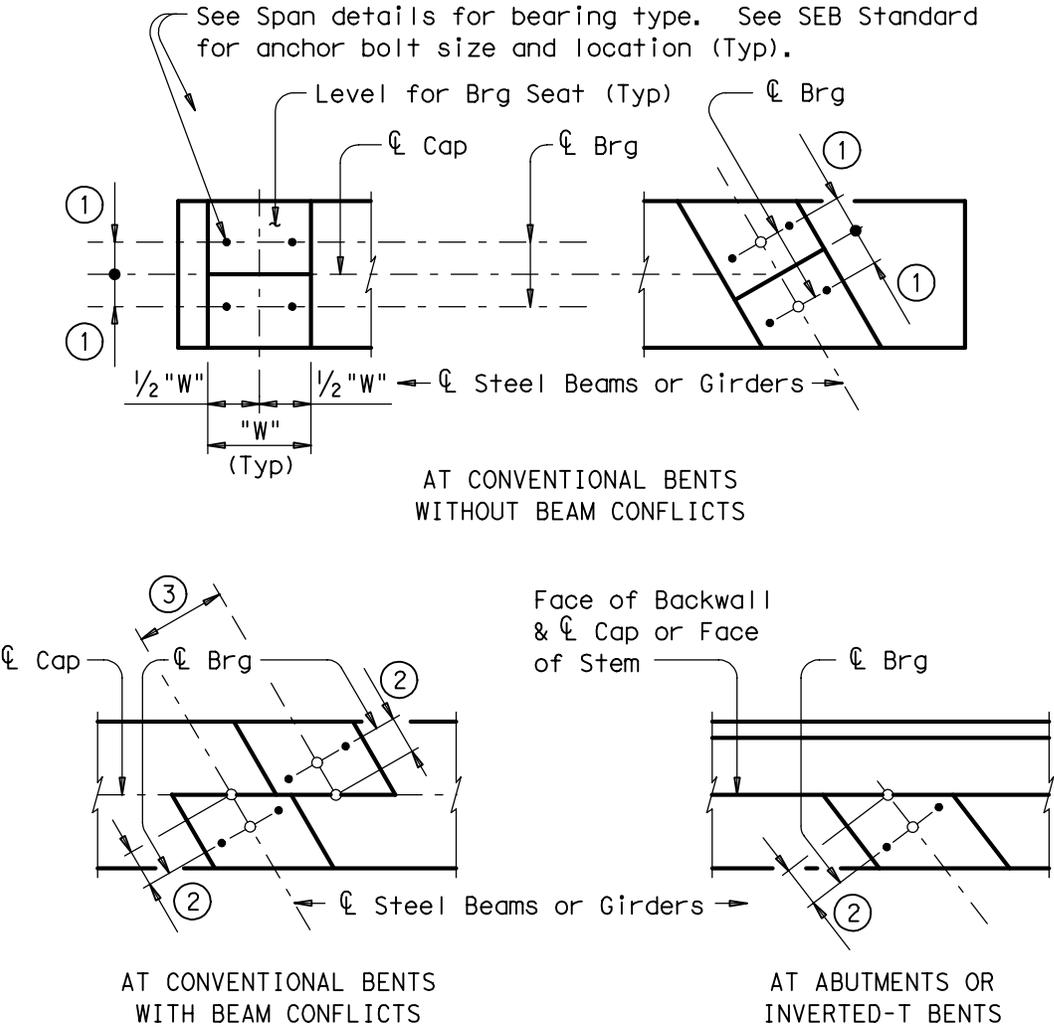


Fig. 6-10